


Translucent Metallic




illusions®

Faux Finishing from Sherwin-Williams®



Roll or form your rag into your desired shape. Soak it with metallic glaze, and blot the excess on paper towel. Dab the rag repeatedly on the wall, overlapping each impression and rotating your hand at the wrist for a seamless look.

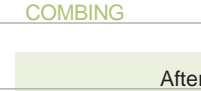

After rolling on a 3-foot-wide metallic glaze coat, lightly drag a combing tool through it in one continuous stroke from ceiling to floor. Apply even pressure, and keep the tool angled toward you, wiping excess glaze from the comb after each stroke to maintain a clean edge.

STEP 1 | Mask ceilings, baseboards, and trim with painter's tape. Paint the wall with your desired basecoat color and allow to dry completely (minimum 4 hours or overnight).

STEP 2 | Mix one part illusions' Translucent Metallic Finish to one part illusions' Faux Finish Latex Glazing Liquid. Apply this metallic glaze over your basecoat using ragging, combing, or your favorite illusions' effect.

OPTIONAL TECHNIQUE | illusions' Translucent Metallic Finish is also ideal when used as a glaze with other illusions' Faux Finish effects like sponging or ragging.

OPTION | Think outside the four-wall box. Apply gold or silver illusions' Translucent Metallic Finish to mantels, trim, furniture, and accessories to create a luxuriously opulent touch.

Simply dazzling, illusions® Translucent Metallic Finish adds an opulent shimmer to your room. This special finish makes a bold, stylish statement when applied over a single basecoat, and adds elegant reflective highlights when used in combination with another faux finishing technique like ragging or combing.

BASECOAT SW 6549 Ash Violet

TOPCOAT illusions® Translucent Metallic Finish in Silver

BASECOAT SW 6717 Lime Rickey

TOPCOAT illusions® Translucent Metallic Finish in Silver

Tip For more information, visit sherwin-williams.com.



Tools

¼" nap roller and paint tray

disposable latex gloves

lint-free cotton rags (ragging)

wallpaper smoothing brush (combing)

plastic bucket (ragging)

low-tack painter's tape

- drop cloth
- practice board
- Sherwin-Williams® SuperPaint® Interior Latex Satin
- illusions® Faux Finish Latex Glazing Liquid™
- illusions® Translucent Metallic Finish


Preparation

A clean, dry, dull surface is optimal for painting. Wash your walls with mild soap and rinse thoroughly. Scrape any loose paint, patch any holes, and sand smooth. Remove dust with a vacuum or tack cloth.

WARNING! Removal of old paint by sanding, scraping, or other means may generate dust or fumes that contain lead. Exposure to lead dust or fumes may cause brain damage or other adverse health effects, especially in children or pregnant women. Controlling exposure to lead or other hazardous substances requires the use of proper protective equipment, such as a properly fitted respirator (NIOSH-approved) and proper containment and cleanup. For more information, call the National Lead Information Center at 1-800-424-LEAD (in U.S.) or contact your local health authority.



sherwin-williams.com
1-800-4-SHERWIN
(1-800-474-3794)

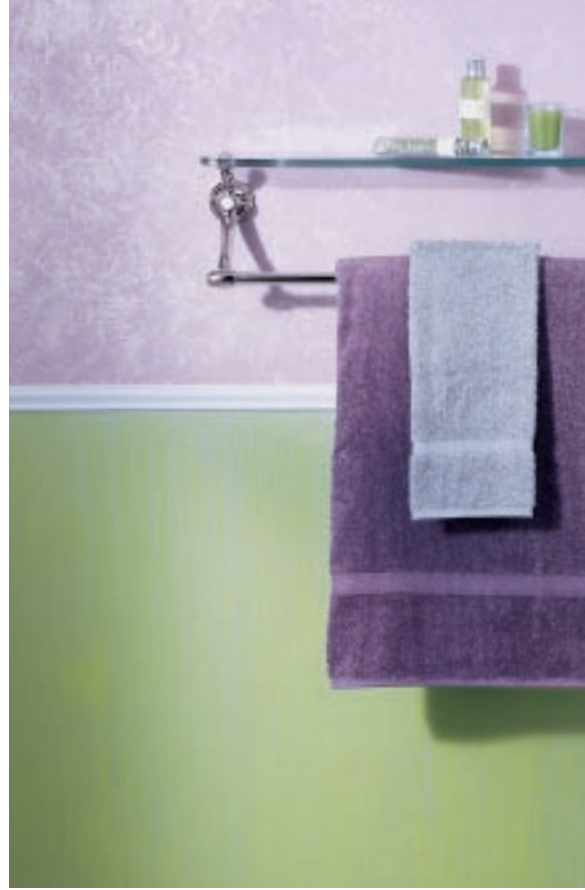

658-8537
2/03



Due to the printing process and the individual nature of faux effects, results and colors may vary from those shown in this brochure.

©2003 The Sherwin-Williams Co. All rights reserved. Printed in the USA.